

## Stainless Steel Gate/Stall Front Latch adjustment

1. Loosen the latch catch bolts just enough to allow the latch catch to slide up and down.
2. Tap the latch catch up or down until the inside latch bar handle rests on the inside of the keeper and the latch bar rests in the bottom of the latch catch notch.
3. Tighten latch catch bolts.

